

 





 













 

 

 



 


 


 



 






 
 





















Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Exit	 Exit / Cancel / Clear
 1	 1	 ?	 D.Menu / Top
 2	 2	 @	 Smart / List
 3	 3	 Menu	 Menu / Home
 4	 4	 Up	 Up
 5	 5	 Back	 Back / Return
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Tools	 Setup / OPT /
 FAV	 Fav / Marker / PC	 Down	 Down
 0	 0	 Guide	 Guide / EPG / -/--
 TXT	 Text / Goto	 Vol+	 Vol+
 Red	 Red / Netflix / Search	 Source	 AV / Input / RDS
 Green	 Green / APP / Repeat	 P+	 CH+ / Page+
 Yellow	 Yellow / YouTube / Repeat	 Vol-	 Vol-
 Blue	 Blue / Prime Video / Random	 Mute	 Mute / Dimmer





Originale	Sostituto
P-	CH- / Page-
<	<< / Preset-
>	>>  / Preset+
<<	<< / Tune-
>>	>> / Tune+
Rec	Rec / Rec Mode
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
3D	Picture / Format
..O	Zoom / Size
[...].	Subtitle / EQ
Netflix	Shift + Red / Netflix /
My Media	Display / Media

Originale	Sostituto

