




















 




 
 

 
 



 
 







 




 


 
 






 



 

 


 


Originale	Sostituto
 Standby/On	 Power
 Rec	 Rec
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Status/Exit	 Exit
 Clear	 Shift + Exit
 Play	 Play
 Stop	 Stop
 Up	 Up

Originale	Sostituto
 Down	 Down
 Right	 Right
 Left	 Left
 >>	 >>
 <<	 <<
 Menu	 Menu
 Vol+	 Vol +
 Vol-	 Vol -
 > </Still	 Pause
 P+	 Ch +
 P-	 Ch -
 Mute	 Mute
 > /Index	 Text
 Slow	 AV
 System	 Media
 Turbo Timer	 Options
 SV/V+	 Format




 


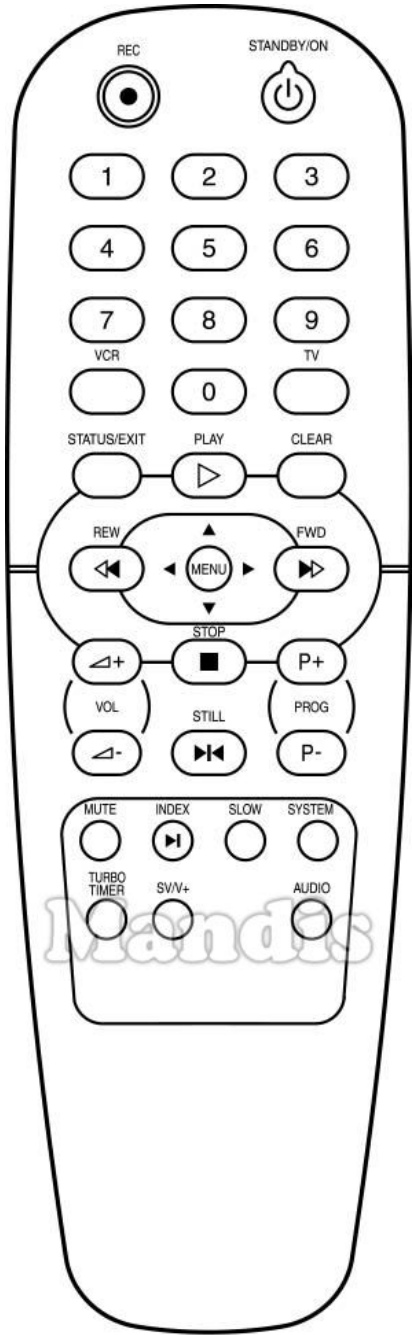Originale

 
Sostituto

Originale

Sostituto

 Audio	 Dual		



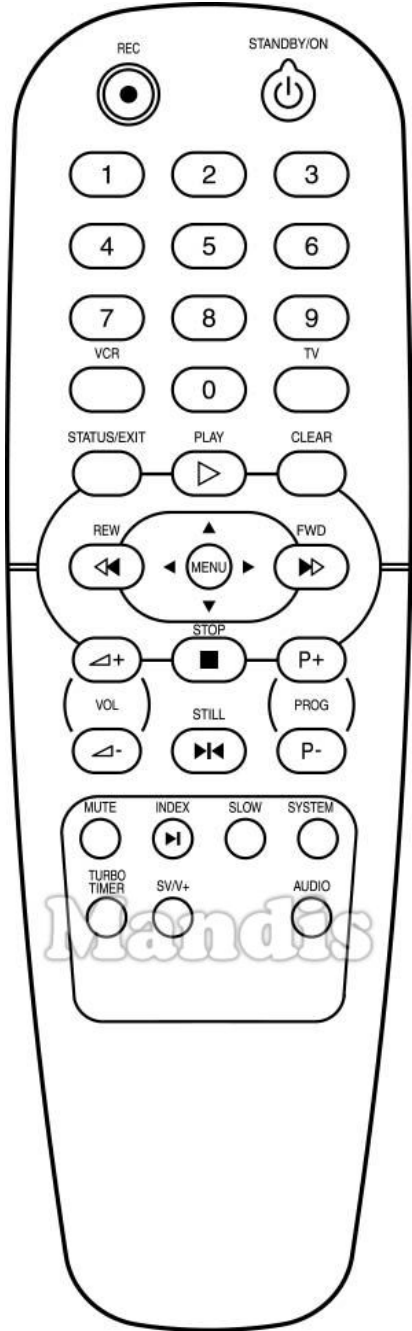

Originale	Sostituto
Standby/On	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Status/Exit	Exit
Menu	Menu
Up	Up
Down	Down
Right	Right
Left	Left

Originale	Sostituto
Vol+	Vol +
Vol-	Vol -
P+	Ch +
P-	Ch -
Mute	Mute

