


 




 
 

 
 



 






 



 









 


 
 


 



 






 

 






 
 

 




Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Tv/Radio		TV/R
	Mute		Mute		Menu		Menu
	1		1		Exit		Exit
	2		2		Record		Rec
	3		3		Stop		Stop
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		OK		Ok
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	Info		Info		TTX		Text
	Recall		Back		FAV		Pre Ch
	EPG		Guide		CH+		Ch +
	Audio		Dual		CH-		Ch -
	Subtitle		Subt		Media		Media





	Originale	Sostituto		Sostituto
	I<<	 I<<		
	Play	 Play		
	<<	 <<		
	USB	 HOME SMART Smart		
	>>	 >>		
	Pause	 Pause		
	>>	 >>		
	Red	 A Red		
	Green	 B Green		
	Yellow	 C Yellow		
	Blue	 D Blue		

	Originale	Sostituto

