





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Info	 Info / Angle
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up

Originale	Sostituto
 Left	 Left
 OK	 OK
 Right	 Right
 Sat	 Shift + 0
 Down	 Down
 FAV	 Fav / Marker / PC
 TV / Radio	 TV/Radio /
 Guide	 Guide / EPG / -/-
 Freeze	 Pause / Step / Freeze
 Aux In	 AV / Input / RDS
 UHF	 Smart / List
 Red / Audio	 Audio / Lang I/II
 Red / Audio	 Red / Netflix / Search
 Green / Positioner	 Green / APP / Repeat
 Yellow / Text	 Yellow / YouTube / Repeat
 Yellow / Text	 Text / Goto
 Blue / Audio R/L	 Blue / Prime Video / Random








Originale

 Blue / Audio R/L

Sostituto

 Sound / Title

 Blue / Audio R/L	 Sound / Title

Originale

Sostituto

