



 
 











 
 
 

 
 
 
 
 

 
 


 

 





Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV / Radio	 TV/R
 ←PR	 Back
 EPG	 Guide
 Menu	 Menu
 Up / PR+	 Up

Originale	Sostituto
 Up / PR+	 Ch +
 Down / PR-	 Down
 Down / PR-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK / List	 Ok
 OK / List	 List
 Info	 Info
 Exit	 Exit
 Red / Audio	 Red
 Red / Audio	 Dual
 Green / TXT	 Green
 Green / TXT	 Text
 Yellow / Subtitle	 Yellow
 Yellow / Subtitle	 Subt





Originale		Sostituto		Originale	Sostituto
	Blue / L/R		Blue		
	Page+		Shift + Ch +		
	Page-		Shift + Ch -		
	Pause		Pause		
	::		Smart		
	FAV		Pre Ch		
	-		Media		
	PAL / NTSC		Format		
	Record		Rec		
	Play		Play		
	Stop		Stop		
	TV / AV		AV		
	<< Fast		<<		
	Fast >>		>>		
	< Seek		I<<		
	Seek >		>>I		

