








 












Originale	Sostituto
Power	Power
Open / Close	Eject / Surround
OSD	Display / Media
1	1
2	2
3	3
Subtitle	Subtitle / EQ
4	4
5	5
6	6
Angle	Info / Angle
7	7
8	8
9	9
Language	Audio / Lang I/II
R/L	Blue / Prime Video / Random
0	0

Originale	Sostituto
10+	Guide / EPG / -/--
Setup	Setup / OPT /
Mute	Mute / Dimmer
Clear	Exit / Cancel / Clear
Prog	TV/Radio /
Time	Sleep / Timer
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Title	Sound / Title
Menu	Menu / Home
Default	AV / Input / RDS
<<	<< / Tune-
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze



























 






Originale	Sostituto
	 I<< / Preset-
	 >> / Tune+
	 Stop / Hold
	 >> / Preset+
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Zoom / Size
	 D.Menu / Top
	 Shift + Pause / Step /
	 Shift + Play /
	 Vol+
	 Smart / List
	 Picture / Format
	 Back / Return
	 Vol-

Originale	Sostituto





Originale	Sostituto
On/Off	 Power
Audio Off	 Mute / Dimmer
Play	 Play / Slow
Pause	 Pause / Step / Freeze
Stop	 Stop / Hold
Record	 Rec / Rec Mode
Rewind	 << / Tune-
F.Forward	 >> / Tune+
Prev.	 I<< / Preset-
Next	 >>I / Preset+
Title	 Sound / Title
Audio	 Audio / Lang I/II
Subt.	 Subtitle / EQ
Open/Close	 Eject / Surround
Auto/Track	 Picture / Format
Zoom	 Zoom / Size
Np	 Sleep / Timer

Originale	Sostituto
Progr.	 TV/Radio /
Top Menu	 D.Menu / Top
Setup	 Setup / OPT /
C/CH	 Text / Goto
DVD/TV	 AV / Input / RDS
Menu	 Menu / Home
Menu Up	 Up
Angle	 Info / Angle
Menu Left	 Left
OK Enter	 OK
Menu Right	 Right
Pbc	 Exit / Cancel / Clear
Menu Down	 Down
Return	 Back / Return
Volume+	 Vol+
Resume	 Smart / List
Slow Up	 CH+ / Page+






















Originale	Sostituto	
Volume-	VOL	Vol-
Display	Display / Media	
Slow Down	CH- / Page-	
1	1	1
2	2	2
3	3	3
4	4	4
5	5	5
6	6	6
7	7	7
8	8	8
9	9	9
+10	Guide / EPG / -/--	
0	0	0
R/L	Fav / Marker / PC	
Search	Red / Netflix / Search	
Repeat/1/All	Green / APP / Repeat	

Originale	Sostituto	
Rep/A-B	Yellow / YouTube / Repeat	
Shuffle	Blue / Prime Video / Random	
Karaoke/Step	+ Shift + Pause / Step /	
Echo+	+ Shift + Up	
Echo-	+ Shift + Down	
3D	+ Shift + 3	
Video	+ Shift + 4	
























Originale	Sostituto	
On/Off		Power
Audio Off		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Title		Sound / Title
Lang		Audio / Lang I/II
Subt.		Subtitle / EQ
Open/Close		Eject / Surround
Auto/Track		Picture / Format
Zoom		Zoom / Size
Pbc		Sleep / Timer

Originale	Sostituto	
Progr.		TV/Radio /
Top Menu		D.Menu / Top
Setup		Setup / OPT /
Resume		Text / Goto
DVD/TV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Angle		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Clear/00:00		Exit / Cancel / Clear
Menu Down		Down
Return		Back / Return
Volume+		Vol+
Mode		Smart / List
Slow Up		CH+ / Page+





Originale	Sostituto	
Volume-	 Vol-	
Display	 Display / Media	
Slow Down	 CH- / Page-	
1	 1	
2	 2	
3	 3	
4	 4	
5	 5	
6	 6	
7	 7	
8	 8	
9	 9	
+10	 Guide / EPG / -/--	
0	 0	
C/CH	 Fav / Marker / PC	
Np	 Red / Netflix / Search	
Repeat/1/All	 Green / APP / Repeat	

Originale	Sostituto	
Rep/A-B	 Yellow / YouTube / Repeat	
R/L	 Blue / Prime Video / Random	

