














 

 

 







 










Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Sleep	 Sleep
 Jump	 Guide
 Audio	 Dual
 Up / CH+	 Up
 Up / CH+	 Ch +

Originale	Sostituto
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 Enter	 Ok
 Menu	 Menu
 TV / Video	 AV
 Index	 Smart
 Reveal	 Media
 Size	 Eject
 Hold	 Stop
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue





Originale		Sostituto		Originale		Sostituto	
	Update		Options				
	Info		Info				
	TXT / TV		Text				

