
 
 
 

 





 



 




 


 



 
 

 




 


 

 

 
 
 
 

 
 
 
 


Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Green / Sub	 Subt
 Mute	 Mute	 Yellow	 Yellow
 1	 1	 Blue	 Blue
 2	 2	 Vol-	 Vol -
 3	 3	 Vol+	 Vol +
 4	 4	 Info	 Info
 5	 5	 Exit	 Exit
 6	 6	 EPG	 Guide
 7	 7	 Smart	 Smart
 8	 8	 File	 Media
 9	 9	 Menu	 Menu
 0	 0	 Up	 Up
 TV / Radio	 TV/R	 Left	 Left
 Last	 Back	 OK	 Ok
 Red / Audio	 Red	 Right	 Right
 Red / Audio	 Dual	 Down	 Down
 Green / Sub	 Green	 TTX	 Text

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 Play	 Play	 Pause	 Pause
 Stop	 Stop	 FF	 FF
 RR	 RR	 SETTINGS	 SETTINGS
 DISC NAV	 DISC NAV	 SOUND	 SOUND
 LIST	 LIST	 AD	 AD
 PROG	 PROG	 SUBT	 SUBT
 SLEEP	 SLEEP	 OPT	 OPT
 E-MANUAL	 E-MANUAL	 PICTURE	 PICTURE
 D.MENU	 D.MENU	 ECO	 ECO
 REPEAT	 REPEAT	 3D	 3D
 TEXT	 TEXT	 TIMER	 TIMER
 AV	 AV	 TOP MENU	 TOP MENU
 MENU	 MENU	 DISPLAY INFO	 DISPLAY INFO
 OK	 OK	 CLEAR	 CLEAR
 Left	 Left	 EXIT	 EXIT
 Right	 Right	 GUIDE	 GUIDE
 Up	 Up	 HOME SMART	 HOME SMART
 Down	 Down	 APP MEDIA	 APP MEDIA
 TV/Radio	 TV/Radio	 TOP MENU MENU	 TOP MENU MENU
 LAST	 LAST	 VOL+	 VOL+
 Red / Audio	 Red / Audio	 HOME	 HOME
 Green / Sub	 Green / Sub	 SMART	 SMART
 Red / Audio	 Red / Audio	 APP MEDIA	 APP MEDIA
 Green / Sub	 Green / Sub	 CH+	 CH+
 Red / Audio	 Red / Audio	 CH-	 CH-
 Green / Sub	 Green / Sub	 1	 1
 Red / Audio	 Red / Audio	 2	 2
 Green / Sub	 Green / Sub	 3	 3
 Red / Audio	 Red / Audio	 4	 4
 Green / Sub	 Green / Sub	 5	 5
 Red / Audio	 Red / Audio	 6	 6
 Green / Sub	 Green / Sub	 7	 7
 Red / Audio	 Red / Audio	 8	 8
 Green / Sub	 Green / Sub	 9	 9
 Red / Audio	 Red / Audio	 0	 0
 Green / Sub	 Green / Sub	 FAV	 FAV
 Red / Audio	 Red / Audio	 PRE-CH	 PRE-CH
Green / Sub	Green / Sub	A	A
Red / Audio	Red / Audio	B	B
Green / Sub	Green / Sub	C	C
Red / Audio	Red / Audio	D	D





Originale	Sostituto
 OPT	 Options
 <<	 <<
 >>	 >>
 Play	 Play
 Stop	 Stop
 Rec	 Rec
 Pause	 Pause
 F1	 Shift + 1
 F2	 Shift + 2

Originale	Sostituto

