


 





 

 



 





 

 

 



 



 
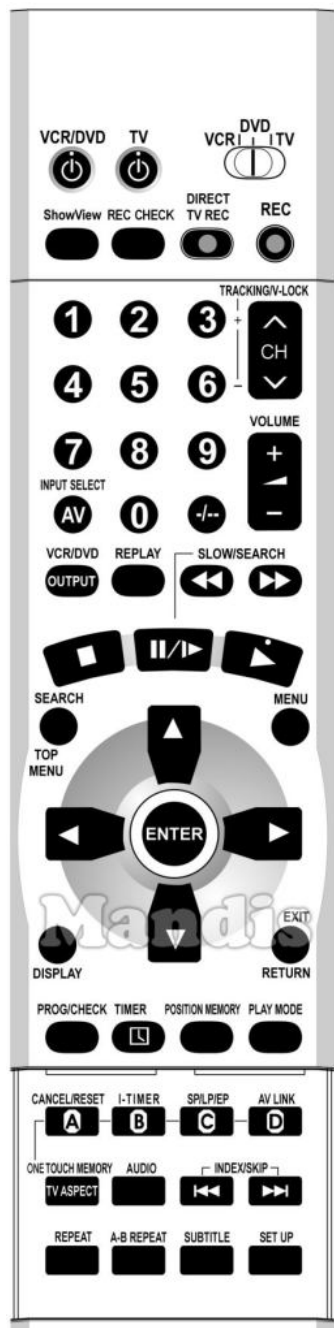 


Originale	Sostituto
 Power DVD	 Power
 Rec Check	 Rec
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --/--	 Guide
 CH+ / Tracking/V-Lock +	 Ch +
 CH- / Tracking/V-Lock -	 Ch -
 AV / Input Select	 AV
 Output DVD	 Media

Originale	Sostituto
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause / Step	 Pause
 Play	 Play
 Top Menu	 D. Menu
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Display	 Info
 Return	 Back
 Timer	 Shift + AV
 Play Mode	 Shift + Play
 Position	 Pre Ch



 
Memory






 

 

 


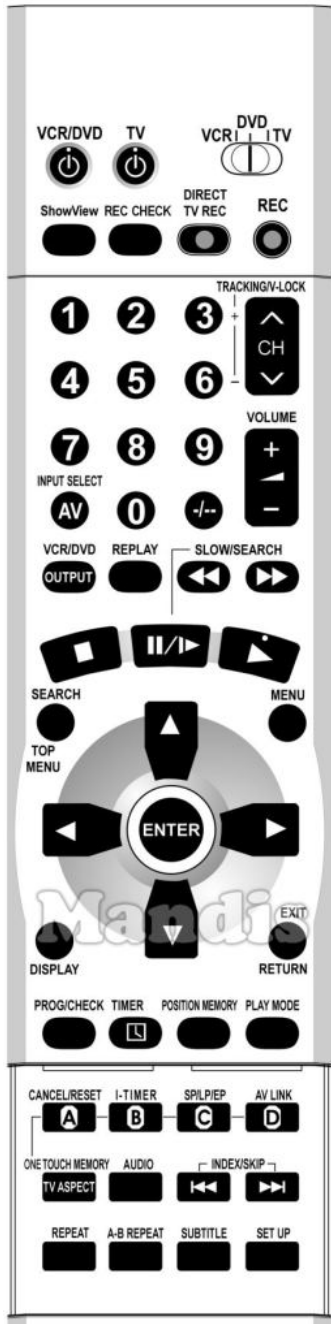


 









 





 









 

 









 

 

 









 

 
Originale		Sostituto	
	Replay		List
	A / Cancel/Reset		Red
	B / I-Timer		Green
	C / SP/LP/EP		Yellow
	D / AV Link		Blue
	One Touch		Smart
	Audio		Dual
	I<< Index/Skip		I<<
	Index/Skip >>I		>>I
	Repeat		Text
	A-B Repeat	 + 	Shift + Text
	Subtitle		Subt
	Setup		Options

Originale		Sostituto	

 




Originale	Sostituto
 Power VCR	 Power
 ShowView	 Smart
 Rec Check	 Options
 Direct TV Rec	 Shift + Rec
 Rec	 Rec
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-	 Guide
 CH+ / Tracking/V-Lock +	 Ch +

Originale	Sostituto
 CH- / Tracking/V-Lock -	 Ch -
 AV / Input Select	 AV
 Output VCR	 Media
 Replay	 List
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause / Step	 Pause
 Play	 Play
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Display	 Info
 Exit	 Exit



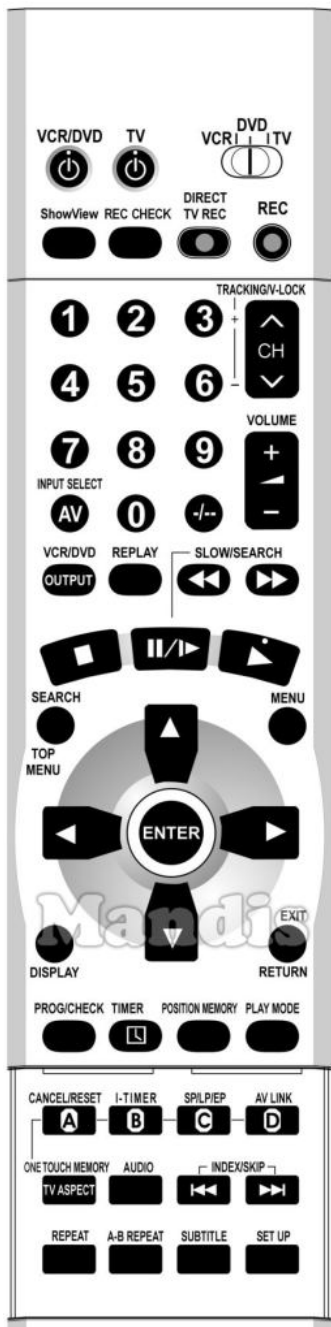

Originale		Sostituto		Originale		Sostituto	
	Prog / Check		Sleep				
	Audio		Dual				
	I<< Index		I<<				
	Index >>I		>>I				

