














 






Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 <<<	 I<<< / Preset-
 >>>	 >>>I / Preset+
 :Q	 Sound / Title
 TV Play	 Eject / Surround
 Format	 Picture / Format
 Live TV	 TV/Radio /
 ≡	 D.Menu / Top
 ⚙	 Setup / OPT /
 Green / TTX	 Text / Goto

Originale	Sostituto
 Source	 AV / Input / RDS
 Home	 Menu / Home
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Del	 Exit / Cancel / Clear
 Blue / Info	 Info / Angle
 Back	 Back / Return
 Vol+	 Vol+
 Vol-	 Vol-
 Internet	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Mouse	 Display / Media
 1	 1





Originale	Sostituto
2	DVD 2
3	CD - STB 3
4	VIDEO 4
5	TAPE 5
6	TUNER 6
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
0	HDMI - BAT 0
Red / EPG	GUIDE EPG Guide / EPG / -/--
←]	PC FAV MARKER Fav / Marker / PC
Red / EPG	NETFLIX SEARCH Red / Netflix / Search
Green / TTX	APP REPEAT Green / APP / Repeat
Yellow / FAV	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue / Info	Prime Video RANDOM Blue / Prime Video / Random
Yellow / FAV	SHIFT + PC FAV MARKER Shift + Fav / Marker / PC

Originale	Sostituto

