







 
 


Originale	Sostituto
 Standby	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 F.List	 Media
 RES	 Smart
 Repeat	 Text
 Capture	 Format
 Book.M	 3D

Originale	Sostituto
 Book.J	 Shift + 3D
 R.Skip	 I<<
 REW	 <<
 FWD	 >>
 F.Skip	 >>I
 Rec	 Rec
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Menu	 Menu
 Exit	 Exit
 Info	 Info
 Back	 Back
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right





Originale	Sostituto
 Down	 Down
 Volume+	 Vol +
 Volume-	 Vol -
 CH/Page+	 Ch +
 CH/Page-	 Ch -
 Red / Audio	 Red
 Red / Audio	 Dual
 Green / Subt	 Green
 Green / Subt	 Subt
 Yellow / Text	 Yellow
 Yellow / Text	 Shift + Text
 Blue / Sleep	 Blue
 Blue / Sleep	 Sleep
 EPG	 Guide
 FAV	 Pre Ch
 SAT List	 List
 Zoom	 Eject

Originale	Sostituto
 Option1	 Options
 Option2	 Shift + Options
 TV / Radio	 TV/R
 TV / STB	 AV

