



| Originale | Sostituto |
|--|--|
|  POWER ON |  +  Shift + Power |
|  POWER |  Power |
|  POWER OFF |  +  Shift + Source |
|  ZOOM UP |  + / Play |
|  ZOOM DOWN |  - / Stop |
|  FOCUS UP |  +  Shift + Vol + / Page + |
|  FOCUS UP 2 |  +  Shift + Right |
|  FOCUS DOWN |  +  Shift + Vol - / Page - |
|  FOCUS DOWN 2 |  +  Shift + Left |
|  VOL + |  Vol + / Page + |
|  VOL - |  Vol - / Page - |
|  MUTE |  Blank / Mute |
|  MENU |  Menu |
|  INPUT 1 |  Comp / Video |
|  INPUT 2 |  +  Shift + Comp / Video |
|  INPUT 3 |  Mode |
|  INPUT NEXT |  Source |

| Originale | Sostituto |
|--|--|
|  UP |  Up |
|  LEFT |  Left |
|  OK |  Enter |
|  RIGHT |  Right |
|  DOWN |  Down |
|  LENS SHIFT |  Eco / Aspect |
|  NO SHOW |  3D / Invert |
|  AUTO PC ADJ. |  Auto |
|  KEYSTONE UP |  +  Shift + Up |
|  KEYSTONE |  +  Shift + Down |
|  FREEZE |  Freeze / Timer |
|  Image |  Volt / Focus |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

