








 

 
 

 

 




Originale	Sostituto
 Power	 Power
 Eject	 Eject
 DVD	 Shift + 1
 TUNER	 Shift + 2
 PORT	 Shift + 3
 AUX	 Shift + 4
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Dual

Originale	Sostituto
 Subtitle	 Subt
 I<<	 I<<
 Step	 Shift + Pause
 Pause	 Pause
 >>I	 >>I
 <<	 <<
 Stop	 Stop
 Play	 Play
 >>	 >>
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Remain	 Smart
 Tuning+ / CH+	 Ch +
 Tuning- / CH-	 Ch -
 Menu	 Menu
 Return	 Back





Originale		Sostituto		Originale		Sostituto	
	Up		Up		ASC		TV/R
	Left		Left		Repeat		Text
	Enter		Ok		Zoom		Shift + Eject
	Right		Right		CD Ripping		Rec
	Down		Down		Dimmer		Shift + Mute
	Info		Info		Sleep		Sleep
	Exit		Exit				
	Dolby PL II Mode		Yellow				
	Dolby PL II Effect		Blue				
	DSP / EQ		Format				
	Cancel		Shift + Exit				
	Tuner Memory		Red				
	Mo/St / Slow		List				
	P.Bass		Options				
	Sound Edit		Shift + Dual				
	SD / HD		Media				
	Logo		3D				





	Originale	Sostituto
	Power	Power
	Mute	Mute
	Menu	Menu
	1	1
	2	2
	3	3
	4	4
	5	5
	6	6
	7	7
	8	8
	9	9
	0	0
	Source	AV
	Vol+	Vol +
	Vol-	Vol -
	CH+	Ch +

	Originale	Sostituto
	CH-	Ch -
	Up	Up
	Left	Left
	Enter	Ok
	Right	Right
	Down	Down
	Info	Info

