

 










Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 <b>SHIFT</b> + <b>GUIDE</b> Shift + Guide
 Recall	 <b>RETURN</b> <b>BACK</b> Back
 Display	 <b>DISPLAY</b> <b>INFO</b> Info
 Source	 <b>TIMER</b> <b>AV</b> AV
 Up	  Up

Originale	Sostituto
 Left	 Left
 Enter	 <b>OK</b> Ok
 Right	 Right
 Down	 Down
 Exit	 <b>CLEAR</b> <b>EXIT</b> Exit
 Menu	 <b>TOP MENU</b> <b>MENU</b> Menu
 Vol+	 <b>+</b> <b>VOL</b> Vol +
 Vol-	 <b>-</b> <b>VOL</b> Vol -
 S.Mode	 <b>SHIFT</b> + <b>SOUND</b> <b>DUAL</b> Shift + Dual
 CH+	 <b>+</b> <b>CH</b> Ch +
 CH-	 <b>-</b> <b>CH</b> Ch -
 Audio I/II	 <b>SOUND</b> <b>DUAL</b> Dual
 P.Mode	 <b>SHIFT</b> + <b>PICTURE</b> <b>FORMAT</b> Shift + Format
 Auto	 <b>HOME</b> <b>SMART</b> Smart
 Sleep	 <b>PROG</b> <b>SLEEP</b> Sleep
 Aspect	 <b>PICTURE</b> <b>FORMAT</b> Format
 Red / Eject	 <b>A</b> Red





Originale	Sostituto
Red / Eject	Eject
Green / D.Menu	Green
Green / D.Menu	D. Menu
Yellow / Setup	Yellow
Yellow / Setup	Options
Blue / D.Disp	Blue
Blue / D.Disp	List
Play/Pause / Text	Text
Play/Pause / Text	Play
Play/Pause / Text	Pause
Stop / Index	Stop
A-B / MIX	Shift + TV/R
Repeat / Reveal	Shift + Text
<< / Hold	Shift + Stop
<< / Hold	<<
>> / Subpage	>>
>> / Subpage	Shift + Subt

Originale	Sostituto
I<< / Size	I<<
I<< / Size	Shift + Eject
>>I / Cancel	>>I
>>I / Cancel	Shift + Exit
Time Shift	Media
Rec	Rec
FAV-	Shift + Left
FAV+	Shift + Right
EPG	Guide
FAV	Pre Ch
Subtitle	Subt
TV / Radio	TV/R

