

 

 

 











 











 

 





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 AV	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Rec	 Rec / Rec Mode
 0	 0
 Stop	 Stop / Hold
 <<<	 <<< / Tune-

Originale	Sostituto
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>>	 >>> / Tune+
 EPG	 Guide / EPG / -/-
 Up	 Up
 Recall	 Fav / Marker / PC
 I<<<	 I<<< / Preset-
 Left	 Left
 OK	 OK
 Right	 Right
 >>>I	 >>>I / Preset+
 Zurück	 Back / Return
 Down	 Down
 Info	 Info / Angle
 P+	 CH+ / Page+
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+





Originale		Sostituto		Originale		Sostituto	
	P-		CH- / Page-				
	Multimedia		Display / Media				
	Vol-		Vol-				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Menü		Menu / Home				
	Untertitel		Subtitle / EQ				
	Lang.		Audio / Lang I/II				
	Ton		TV/Radio /				
	Zoom		Zoom / Size				
	TXT		Text / Goto				
	Internet		Smart / List				
	FAV	+	Shift + Fav / Marker / PC				
	Bildmodus		Picture / Format				

