





 

 





 

 



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Mute	 Mute / Dimmer
 1	 1	 I<<	 I<< / Preset-
 2	 2	 >>I	 >>I / Preset+
 3	 3	 <<	 << / Tune-
 4	 4	 >>	 >> / Tune+
 5	 5	 Stop	 Stop / Hold
 6	 6	 Pause	 Pause / Step / Freeze
 7	 7	 Play	 Play / Slow
 8	 8	 Info	 Info / Angle
 9	 9	 Exit	 Exit / Cancel / Clear
 0	 0	 Media Center	 Display / Media
 P+	 CH+ / Page+	 Up	 Up
 P-	 CH- / Page-	 Home Menu	 Menu / Home
 Vol+	 Vol+	 Pop-Up Menu	 D.Menu / Top
 Vol-	 Vol-	 Down	 Down
 Open/Close	 Eject / Surround	 Left	 Left
 Guide	 Guide / EPG / -/-	 Right	 Right

Originale	Sostituto	Originale	Sostituto
 Mute	 Mute / Dimmer	 I<<	 I<< / Preset-
 >>I	 >>I / Preset+	 <<	 << / Tune-
 >>	 >> / Tune+	 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze	 Play	 Play / Slow
 Info	 Info / Angle	 Exit	 Exit / Cancel / Clear
 Media Center	 Display / Media	 Up	 Up
 Home Menu	 Menu / Home	 Pop-Up Menu	 D.Menu / Top
 Down	 Down	 Left	 Left
 Right	 Right		





Originale	Sostituto
	 OK
	 Setup / OPT /
	 Back / Return
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Rec / Rec Mode
	 Text / Goto
	 Subtitle / EQ
	 TV/Radio /
	 Sleep / Timer
	 Smart / List
	 Shift + Display / Media
	 Sound / Title
	 Picture / Format
	 Audio / Lang I/II

Originale	Sostituto
	 Fav / Marker / PC
	 AV / Input / RDS
	 Shift + Power
	 Shift + Vol+
	 Shift + Vol-
	 Shift + CH+ /
	 Shift + CH- /
	 Shift + AV / Input / RDS

