
 
 

 
 

 

 


 

 



 





 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Info		Info
	Tv/Radio		TV/R		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		CH+		Ch +
	6		6		CH-		Ch -
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		Red/F1		Red
	0		0		Green/F2		Green
	EPG		Guide		Yellow/F3		Yellow
	Recall		Back		Blue/F4		Blue
	Menu		Menu		Subt		Subt
	FAV		Pre Ch		Audio		Dual

 

 







 

 



 



 
 



Originale		Sostituto		Originale		Sostituto	
	TXT		Text				
	Zoom		Eject				
	Play/Pause		Play				
	Stop		Stop				
	I>/Slow		Pause				
	Rec		Rec				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				







Originale	Sostituto	
On/Off		Power
Mute		Mute
Update		Smart
Subt.List		Subt
Info		Info
Sleep Timer		Sleep
Return TV		TV/R
Text		Text
Menu		Menu
Menu Up		Up
Menu Left		Left
OK Enter		Ok
Menu Right		Right
Menu Off		Exit
Menu Down		Down
Back		Back
Volume+		Vol +

Originale	Sostituto	
Chan.Up		Ch +
Volume-		Vol -
Menu audio		Dual
Chan.Down		Ch -
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
Red		Red
Green		Green





Originale	Sostituto	Originale	Sostituto
Yellow		Yellow	
Blue		Blue	

