



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Index	 List
 SD	 Smart	 Hold	 Options
 [+]	 Info	 N	 Media
 Tv/AV	 AV	 CH+	 Ch +
 Menu	 Menu	 CH-	 Ch -
 Exit	 Exit	 Vol+	 Vol +
 Up	 Up	 Vol-	 Vol -
 Down	 Down	 Mute	 Mute
 Right	 Right	 1	 1
 Left	 Left	 2	 2
 OK	 Ok	 3	 3
 Red	 Red	 4	 4
 Green	 Green	 5	 5
 Yellow	 Yellow	 6	 6
 Blue	 Blue	 7	 7
 Tv/Text	 Text	 8	 8
 F.P.	 Eject	 9	 9





Originale		Sostituto	
	0		0
	-/--		Guide
	C		Pre Ch
	Aspect		3D
	Multiwindow		D. Menu
	Direct Tv Rec		TV/R
	Power VCR		Shift + Power
	Rec VCR		Rec
	Programme Up		Shift + Ch +
	Programme Down		Shift + Ch -
<< VCR button" data-bbox="232 708 263 745"/>	<< VCR		<<
	>> VCR		>>
	Stop VCR		Stop
	Pause/Step VCR		Pause
	Play VCR		Play

Originale		Sostituto	





Originale	Sostituto	Originale	Sostituto
Power DVD	Power		
Rec DVD	Rec		
Programme Up	Ch +		
Programme Down	Ch -		
<< DVD	<<		
>> DVD	>>		
Stop DVD	Stop		
Pause/Step DVD	Pause		
Play DVD	Play		

