



Originale	Sostituto
	 Power
	 Mute
	 Info
	 Options
	 Shift + Format
	 Shift + Dual
	 AV
	 Guide
	 >>
	 <<
	 Pre Ch
	 Menu
	 Format
	 Dual
	 Exit
	 Vol -
	 Vol +



 

 
 
 

 





 

 
 
 


 


 
 
 





Originale	Sostituto
	 Up
	 Left
	 Ok
	 Right
	 Down
	 Ch -
	 Ch +
	 Red
	 Shift + Left
	 Green
	 Shift + Down
	 Yellow
	 Shift + Up
	 Blue
	 Shift + Right
	 1
	 2









Originale	Sostituto	Originale	Sostituto
			9
			0
			Guide
			Up
			Right
			Ok
			Left
			Down
			Subt
			Pause
			Rec
			<<
			Play
			>>
			Shift + Media
			Shift + Dual
			Shift + 6

