


 

 

 



 

 

 

 

 







 










Originale	Sostituto
 Power	 Power
 HDD	 Shift + Media
 DVD	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Cancel	 Exit
 AV	 AV
 Input Select	 Eject

Originale	Sostituto
 Direct Tv Rec	 TV/R
 ShowView	 3D
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 I<< Skip	 I<<
 Skip >>I	 >>I
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Pause	 Pause
 Stop	 Stop
 Play	 Play
 Menu / Play List	 Menu
 Top Menu / Direct Navigator	 D. Menu
 Functions	 Options
 Return	 Back

 
 

 
 
 
 
 
 
 






**Originale      Sostituto**

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Rec		Rec
	Frame II >		Shift + Right
	< II Frame		Shift + Left
	Manual Skip		Format
	Erase		Text
	Time Slip		Smart
	Prog/Check		Sleep
	Timer		Shift + AV
	Marker		Pre Ch
	Dubbing		Subt
	Status		List
	Rec Mode		Shift + Rec

**Originale      Sostituto**

	A/Display		Red
	A/Display		Info
	B/Position		Green
	C/Audio		Yellow
	C/Audio		Dual
	D/AV Link		Blue





Originale	Sostituto
Power	Power
CH+	Ch +
CH-	Ch -
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide
A	Red
B	Green
C	Yellow

Originale	Sostituto
D	Blue

