

 





 



Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Zoom	 Eject
 AV	 AV
 VOD	 Smart
 m@ TV	 Media
 Guide	 Guide
 Vol+	 Vol +

Originale	Sostituto
 Vol-	 Vol -
 Home	 Shift + Smart
 Home	 Menu
 Mute	 Mute
 CH+	 Ch +
 CH-	 Ch -
 Liste	 List
 Infos	 Info
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Retour	 Back
 Quitter	 Exit
 <<	 <<
 >>	 >>





Originale	Sostituto
 Rec	 Rec
 Stop	 Stop
 Pause / Play	 Play
 Pause / Play	 Pause

Originale	Sostituto

