








 

 
 



 

 

 

 

 

 
 
 

 
 
 





 

 






Originale	Sostituto
 Power	 Power
 Input	 AV
 Tv/Radio	 TV/R
 Sync Menu	 Menu
 Exit	 Exit
 1	 1
 2	 2
 3	 3
 5	 5
 4	 4
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [i+]/[?]	 Info
 [=]	 Text

Originale	Sostituto
 Netflix	 Media
 Google-Play	 Shift + Media
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Action Menu	 D. Menu
 Guide	 Guide
 Home	 Smart
 Discover	 Options
 Back	 Back
 TV	 3D
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Originale	Sostituto	Originale	Sostituto
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -
	Digital/Analog		Sleep
	Mute		Mute
	Recall		Pre Ch
	Audio		Dual
	<<		<<
	Play		Play
	>>		>>
	I<<		I<<
	Pause		Pause
	>>I		>>I
	Rec		Rec
	Stop		Stop
	[...]		Subt

Originale	Sostituto	Originale	Sostituto
	Help		Format
	Title List		List

