 

 







 

 

 



 



 

 



 

 

 








 


 



 



 













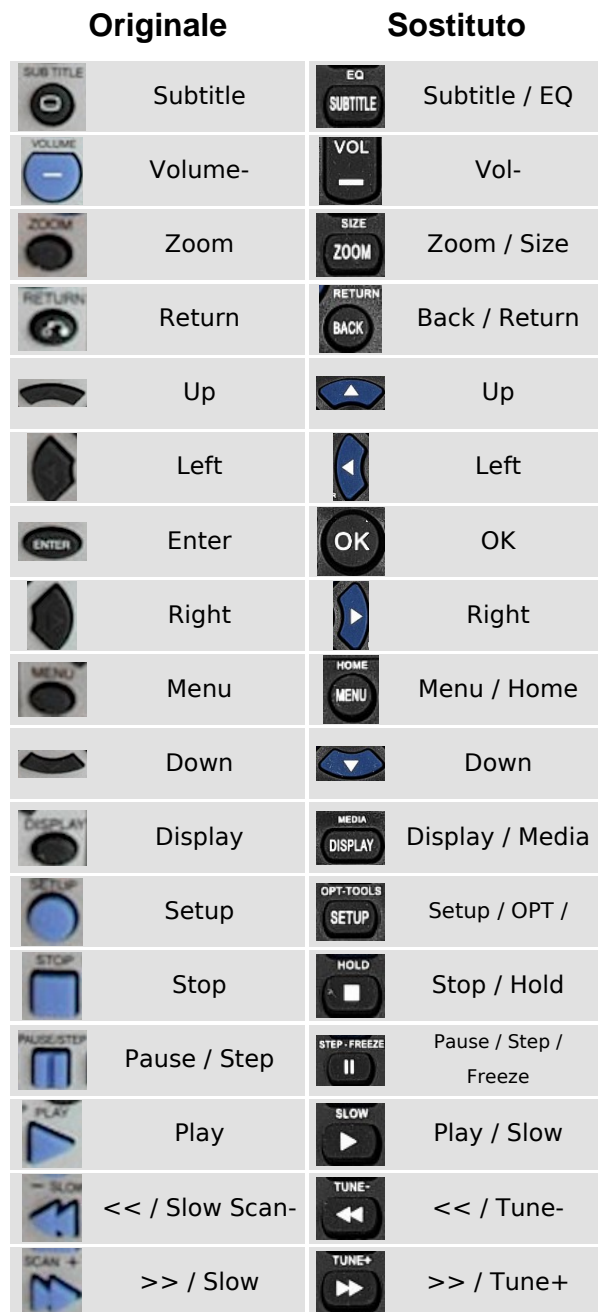 




Originale	Sostituto
 Open / Close	 Eject / Surround
 Power	 Power
 CD / DVD	 Shift + 3
 CD / DVD	 Shift + 2
 Band	 Smart / List
 Band	 Shift + 6
 AUX	 Shift + 7
 Mute	 Mute / Dimmer
 Dimmer	 Shift + Mute / Dimmer
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 RDS	 AV / Input / RDS
 4	 4
 5	 5
 6	 6

Originale	Sostituto
 PTY	 Shift + Smart / List
 7	 7
 8	 8
 9	 9
 PTY Search	 Shift + Display / Media
 Repeat	 Green / APP / Repeat
 0	 0
 Repeat A-B	 Yellow / YouTube / Repeat
 Program	 TV / Radio /
 Clear	 Exit / Cancel / Clear
 Sound Mode	 Sound / Title
 Preset+	 Shift + Preset+
 Preset+	 CH+ / Page+
 Audio	 Audio / Lang I/II
 Volume+	 Vol+
 Preset-	 Shift + I<< / Preset-
 Preset-	 CH- / Page-





Power DIMMER MUTE SHIFT

TV DVD SAT AUX

SLOW STEP - FREEZE HOLD REC MODE

TUNE- TUNE+ PRESET- PRESET+

◀ ▶

TITLE LANG VUI EQ SURROUND

SOUND AUDIO SUBTITLE

FORMAT SIZE TIMER PROGRAM

PICTURE ZOOM SLEEP TV/ RADIO

TOP MENU OPT-TOOLS GOTO RDS

D.MENU SETUP TEXT AV INPUT

HOME ANGLE

MENU INFO

◀ ▶

OK

◀ ▶

CLEAR RETURN

EXIT BACK

CANCEL LIST

+ VOL - SMART CH PAGE

— —

TV DVD CD - STB

1 2 3

VIDEO TAPE TUNER

4 5 6

AUX - HDD USB BLUETOOTH

7 8 9

— -- HDMI - SAT PC

GUIDE 0 FAV MARKER

EPG

NETFLIX APP YouTube Prime Video

SEARCH REPEAT REPEAT A-B RANDOM

Mandis shop

www.mandis.tv