



 




 

 
 










 






 




 
 
 

 
 
 
 
 
 


 









 



 










| Originale  | Sostituto   | Originale   | Sostituto   |
|--|---|---|---|
|  Power        |  Power   |  Contents  |  Smart   |
|  Open / Close |  Exit    |  Source    |  AV      |
|  Display      |  Info    |  TV / Mode |  TV/R    |
|  Setup        |  Options |  Up        |  Up      |
|  1            |  1       |  Left      |  Left    |
|  2            |  2       |  Enter     |  Ok      |
|  3            |  3       |  Right     |  Right   |
|  4            |  4       |  Down      |  Down    |
|  5            |  5       |  Top Menu  |  D. Menu |
|  6            |  6       |  Menu      |  Menu    |
|  7          |  7     |  Stop    |  Stop  |
|  8          |  8     |  Play    |  Play  |
|  9          |  9     |  II>     |  Pause |
|  0          |  0     |  I<<     |  I<<   |
|  CH+        |  Ch +  |  >>I     |  >>I   |
|  CH-        |  Ch -  |  <<      |  <<    |
|  Guider     |  Guide |  >>      |  >>    |

| Originale   | Sostituto   | Originale   | Sostituto   |
|---|---|---|---|
|  MUTE          |  MUTE          |  SHIFT           |  SHIFT           |
|  TV            |  TV            |  DVD             |  DVD             |
|  SAT           |  SAT           |  AUX             |  AUX             |
|  PLAY MODE     |  PLAY MODE     |  REC MODE        |  REC MODE        |
|  Play          |  Play          |  Pause           |  Pause           |
|  >>I           |  >>I           |  <<              |  <<              |
|  I<<           |  I<<           |  >>              |  >>              |
|  DISC NAV      |  DISC NAV      |  SOUND           |  SOUND           |
|  LIST          |  LIST          |  AD              |  AD              |
|  PROG          |  PROG          |  SETTINGS        |  SETTINGS        |
|  SLEEP         |  SLEEP         |  OPT             |  OPT             |
|  E-MANUAL      |  E-MANUAL      |  ECO             |  ECO             |
|  D.MENU        |  D.MENU        |  3D              |  3D              |
|  TOP MENU      |  TOP MENU      |  TIMER           |  TIMER           |
|  MENU          |  MENU          |  AV              |  AV              |
|  OK            |  OK            |  INFO            |  INFO            |
|  Left          |  Left          |  BACK            |  BACK            |
|  Right         |  Right         |  HOME            |  HOME            |
|  Down          |  Down          |  SMART           |  SMART           |
|  EXIT          |  EXIT          |  APP             |  APP             |
|  VOL+          |  VOL+          |  MEDIA           |  MEDIA           |
|  VOL-          |  VOL-          |  CH+            |  CH+            |
|  1           |  1           |  CH-           |  CH-           |
|  2           |  2           |  FAV           |  FAV           |
|  3           |  3           |  GUIDE         |  GUIDE         |
|  4           |  4           |  0             |  0             |
|  5           |  5           |  PRE-CH        |  PRE-CH        |
|  6           |  6           |  A             |  A             |
|  7           |  7           |  B             |  B             |
|  8           |  8           |  C             |  C             |
|  9           |  9           |  D             |  D             |
|  Mandis SHOP |  Mandis SHOP |  www.mandis.tv |  www.mandis.tv |



