 









 
 
 








 
 


 

 






Originale	Sostituto
 Power	 Power
 TV/STB	 Smart
 Menu	 Menu
 EPG	 Guide
 TV / Rad	 TV/R
 ↓	 I<<
 ↑	 >>I
 Up / P+	 Up
 Up / P+	 Ch +
 Down / P-	 Down
 Down / P-	 Ch -
 Right / V+	 Right
 Right / V+	 Vol +
 Left / V-	 Left
 Left / V-	 Vol -
 OK	 Ok
 Red / Opt	 Red

Originale	Sostituto
 Red / Opt	 Options
 Yellow / Fav	 Yellow
 Yellow / Fav	 Pre Ch
 Green / A/V+	 Green
 Blue / A-Z	 Blue
 ↶	 Back
 i	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Originale

Sostituto

	TXT		Text
	Mute		Mute

Originale

Sostituto