




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 SUBTIL	 Subt
 TV / SAT	 Smart
 FAV	 Pre Ch
 RCL	 Back
 Up / CH+	 Up

Originale	Sostituto
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Menu	 Menu
 Exit	 Exit
 TXT	 Text
 USB	 Media
 Info	 Info
 Audio	 Dual
 M / P	 Options
 Up / CH+	 Ch +
 Page+	 Shift + Ch +
 Page-	 Shift + Ch -





Originale	Sostituto
 Red / SAT	 AV
 Red / SAT	 Red
 Green / Zoom	 Green
 Green / Zoom	 Eject
 Yellow / Pause	 Yellow
 Yellow / Pause	 Shift + Pause
 Blue / TV/Radio	 Blue
 Blue / TV/Radio	 TV/R
 <<	 <<
 >>	 >>
 Play	 Play
 Stop	 Stop
 I<<	 I<<
 >>I	 >>I
 Pause	 Pause
 Slow	 Shift + Play

Originale	Sostituto

