



Originale		Sostituto		Originale		Sostituto	
	System Standby		Power		Play		Play
	Sleep		Sleep		Pause		Pause
	Master Vol+		Vol +		Stop		Stop
	Master Vol-		Vol -		Tv/Video/ANT		TV/R
	Muting		Mute		Main Menu		Smart
	Top Menu		Menu		Test Tone		Back
	DVD Menu		D. Menu		Multi CH		3D
	Up		Up		2CH		Subt
	Down		Down		AFD		Dual
	Right		Right		A.F.D.		List
	Left		Left		+		Ch +
	Enter		Ok		-		Ch -
	Recall		Pre Ch		Menu >		Shift + Right
	>>I/CH/Preset+		>>I		< Menu		Shift + Left
	I<</CH/Preset-		I<<		Tv CH+		Shift + Ch +
	<<		<<		Tv CH-		Shift + Ch -
	>>		>>		Tv Vol+		Shift + Vol +





Originale	Sostituto
 Tv Vol-	 Shift + Vol -
 D.Skip/TV/VTR	 Text
 Video1	 Red
 Video 2	 Green
 SA-CD	 Yellow
 DVD	 Blue
 MD/Tape	 AV
 Tuner	 Eject
 Standby AV	 Shift + Power
 1 Tuner	 1
 2 Tuner	 2
 3 Tuner	 3
 4 Tuner	 4
 5 Tuner	 5
 6 Tuner	 6
 7 Tuner	 7
 8 Tuner	 8

Originale	Sostituto
 9 Tuner	 9
 0 Tuner	 0
 >10 Tuner/Shift/-/	 Guide
 Enter/D.Tuning/Return Tuner	 Info
 >>I/CH Preset+ Tuner	 Shift + >>I
 I<</CH Preset- Tuner	 Shift + I<<





Originale	Sostituto
 Standby	 Power
 Video 1	 Red
 Video 2	 Green
 SA-CD	 Yellow
 DVD	 Blue
 MD/Tape	 AV
 Tuner	 Eject
 Master Vol+	 Vol +
 Master Vol-	 Vol -
 Muting	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Originale	Sostituto
 8	 8
 9	 9
 0	 0
 >10/Shift/-/--	 Guide
 Enter/D.Tuning/Return	 Info
 D.Skip/TV/VTR	 Text
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Play	 Play
 Pause	 Pause
 Stop	 Stop





Originale	Sostituto
 Standby CD	 Power
 Video 1	 Red
 Video 2	 Green
 SA-CD	 Yellow
 DVD	 Blue
 MD/Tape	 AV
 Tuner	 Eject
 1 CD	 1
 2 CD	 2
 3 CD	 3
 4 CD	 4
 5 CD	 5
 6 CD	 6
 7 CD	 7
 8 CD	 8
 9 CD	 9
 0 CD	 0

Originale	Sostituto
 >10/Shift/-/-- CD	 Guide
 Enter/D.Tuning/Return CD	 Info
 I<< CD	 I<<
 >>I CD	 >>I
 << CD	 <<
 >> CD	 >>
 Play CD	 Play
 Pause CD	 Pause
 Stop CD	 Stop
 D.Skip/TV/VTR CD	 Text
 Master Vol+	 Vol +
 Master Vol-	 Vol -
 Muting	 Mute
 Standby Video	 Shift + Power
 1 Video 1	 Shift + 1
 2 Video 1	 Shift + 2
 3 Video 1	 Shift + 3









 




Originale	Sostituto
 4 Video 1	 +  Shift + 4
 5 Video 1	 +  Shift + 5
 6 Video 1	 +  Shift + 6
 7 Video 1	 +  Shift + 7
 8 Video 1	 +  Shift + 8
 9 Video 1	 +  Shift + 9
 0 Video 1	 +  Shift + 0
 >10/Shift/-/- Video 1	 +  Shift + Guide
 Enter/D.Tuning/Return Video 1	 +  Shift + Info
 D.Skip/TV/VTR Video 1	 +  Shift + Text
 L<< Video 1	 +  Shift + L<<
 <<< Video 1	 +  Shift + <<<
 >>> Video 1	 +  Shift + >>>
 >>I Video 1	 +  Shift + >>I
 Play Video 1	 +  Shift + Play
 Pause Video 1	 +  Shift + Pause
 Stop Video 1	 +  Shift + Stop

Originale	Sostituto





Originale	Sostituto
 Standby	 Power
 Video 1	 Red
 Video 2	 Green
 SA-CD	 Yellow
 DVD	 Blue
 MD/Tape	 AV
 Tuner	 Eject
 1 MD/Tape	 1
 2 MD/Tape	 2
 3 MD/Tape	 3
 4 MD/Tape	 4
 5 MD/Tape	 5
 6 MD/Tape	 6
 7 MD/Tape	 7
 8 MD/Tape	 8
 9 MD/Tape	 9
 0 MD/Tape	 0

Originale	Sostituto
 >10/Shift/-/- MD/Tape	 Guide
 Enter/D.Tuning/Return MD/Tape	 Info
 D.Skip/TV/VTR MD/Tape	 Text
 I<< MD/Tape	 I<<
 >>I MD/Tape	 >>I
 << MD/Tape	 <<
 >> MD/Tape	 >>
 Play MD/Tape	 Play
 Pause MD/Tape	 Pause
 Stop MD/Tape	 Stop
 Muting	 Mute
 Master Vol+	 Vol +
 Master Vol-	 Vol -
 Standby Video	 Shift + Power
 1 Video 2	 Shift + 1
 2 Video 2	 Shift + 2
 3 Video 2	 Shift + 3





Originale	Sostituto
4	SHIFT + 4 Shift + 4
5	SHIFT + 5 Shift + 5
6	SHIFT + 6 Shift + 6
7	SHIFT + 7 Shift + 7
8	SHIFT + 8 Shift + 8
9	SHIFT + 9 Shift + 9
0	SHIFT + 0 Shift + 0
SHIFT >10	SHIFT + GUIDE Shift + Guide
D.TUNING RETURN	SHIFT + DISPLAY INFO Shift + Info
TV/VTR D.SKIF	SHIFT + REPEAT TEXT Shift + Text
CH/PR	SHIFT + I<< Shift + I<<
PRESET +	SHIFT + >>I Shift + >>I
CH/PR	SHIFT + << Shift + <<
PRESET +	SHIFT + >> Shift + >>
Play Video 2	SHIFT + PLAY MODE Shift + Play
Stop Video 2	SHIFT + [STOP] Shift + Stop
Pause Video 2	SHIFT + [PAUSE] Shift + Pause

Originale	Sostituto

