
 
 




Originale	Sostituto
 Power	 Power
 USB	 Smart
 Radio	 TV/R
 Coax	 3D
 AUX	 AV
 MP3 Link	 Media
 Audio	 Dual
 Setup	 Menu
 Back	 Back
 Info	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 >>	 >>
 <<	 <<

Originale	Sostituto
 I<	 I<<
 Play/Pause	 Play
 >I	 >>I
 Stop	 Stop
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Surround	 Options
 Treble	 Ch +
 Bass	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





Originale	Sostituto
8	8
9	9
0	0
Subtitle	Subt
Audio Sync	Pre Ch
Repeat/Program	Text
Repeat A-B	List
Zoom	Eject
Sound Mode	Green

Originale	Sostituto

