 

 









 







 

 

 



 







 











 







 















Originale		Sostituto		Originale		Sostituto	
	Power		Power		Rec		Rec / Rec Mode
	Mute		Mute / Dimmer		Menu		Menu / Home
	Red		Red / Netflix / Search		Up		Up
	Green		Green / APP / Repeat		Exit		Exit / Cancel / Clear
	Yellow		Yellow / YouTube / Repeat		Left		Left
	Blue		Blue / Prime Video / Random		OK		OK
	Zoom		Zoom / Size		Right		Right
	SUB		Subtitle / EQ		EPG		Guide / EPG / -/-
	Timeshift		Shift + Sleep / Timer		Down		Down
	USB		Shift + 8		Info		Info / Angle
	TV/Radio		TV/Radio /		I<<		I<< / Preset-
	TXT		Text / Goto		Audio		Audio / Lang I/II
	PVRList		Smart / List		<<		<< / Tune-
	Sleep		Sleep / Timer		>>		>> / Preset+
	Play		Play / Slow		SAT		Shift + 0
	Pause		Pause / Step / Freeze		>>		>> / Tune+
	Stop		Stop / Hold		1		1



