 

 

 



 

 

 

 

 

 

 

 

 

 



 
 






 

 













 





 









Originale	Sostituto	Originale	Sostituto
 PWR	 Power	 TV/Rad	 TV/Radio /
 TV/STB	 Display / Media	 1	 1
 2	 2	 3	 3
 4	 4	 5	 5
 6	 6	 7	 7
 8	 8	 9	 9
 Back	 Back / Return	 0	 0
 Mute	 Mute / Dimmer	 Red	 Red / Netflix / Search
 OPT	 Setup / OPT /		

Originale	Sostituto	Originale	Sostituto
 Green	 Green / APP / Repeat	 A/V+	 AV / Input / RDS
 Yellow / FAV	 Yellow / YouTube / Repeat	 FAV	 Fav / Marker / PC
 Blue / A-Z	 Blue / Prime Video / Random	 Blue / A-Z	 Shift + Blue / Prime
 Menu	 Menu / Home	 EPG	 Guide / EPG / -/-
 Info	 Info / Angle	 Up	 Up
 Left	 Left	 OK	 OK
 Right	 Right	 Down	 Down
 Vol+	 Vol+	 Exit	 Exit / Cancel / Clear
 PR/CH+	 CH+ / Page+		





Originale	Sostituto	Originale	Sostituto
	VOL Vol-		
	CH PAGE CH- / Page-		
	STEP-FREEZE Pause / Step / Freeze		
	SLOW Play / Slow		
	TUNE- << / Tune-		
	HOLD Stop / Hold		
	TUNE+ >> / Tune+		
	REC MODE Rec / Rec Mode		
	SHIFT + SLOW Shift + Play / I>/Slow		
	LIST SMART Smart / List [:≡]/List		
	SHIFT + REPEAT A-B Shift + YouTube / Yellow / YouTube /		
	SHIFT + FAV MARKER Shift + Fav / Marker / PC		
	GOTO TEXT Text / Goto		
	SHIFT + OK Shift + OK		
	SHIFT + Shift + Left		
	SHIFT + Shift + Right		
	TIMER SLEEP Sleep / Timer		

