

 





 

 

 
 
 

 


 

 
 

 

 
 
 
 

 
 

 



 

 

 
 
 
 
 
 
 

 
 

 

 
 

 
 



 








Originale	Sostituto
 Power	 Power
 Theatre	 Smart
 One-Touch Play	 Shift + Play
 Eject	 Eject
 Sleep	 Sleep
 Display	 Shift + Info
 Function	 Options
 Tone	 3D
 Night	 Shift + Sleep
 Dimmer	 Shift + Mute
 Repeat	 Text
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Originale	Sostituto
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Enter	 Pre Ch
 Picture Navi	 List
 Audio	 Dual
 Subtitle	 Subt
 D.Tuning	 Media
 Angle	 Format
 DVD Top Menu	 Shift + Menu
 DVD Menu	 D. Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right








 


 
 
 

 

 
 




 




 

 
 
 

 

 




 



 
 






 

Originale	Sostituto
Down	Down
Return	Back
System Menu	Menu
[+] Display	Info
I<< / Preset-	I<<
Replay	Shift + Left
Advance	Shift + Right
>>I / Preset+	>>I
<< / <I / Tuning-	<<
Play	Play
>> / I> / Tuning+	>>
Pause	Pause
Stop	Stop
TV	TV/R
Muting	Mute
Volume+	Vol +
Volume-	Vol -

Originale	Sostituto
Sound Mode+	Ch +
Sound Mode-	Ch -





Originale	Sostituto
 Power	 Power
 [i+]	 Info
 Analog	 Media
 Digital	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Text	 Text
 -/--	 Shift + Guide
 Guide	 Guide

Originale	Sostituto
 Source	 AV
 Tools / Options	 Options
 Home / Menu	 Menu
 Muting	 Mute
 Volume+	 Vol +
 Volume-	 Vol -
 Prog+	 Ch +
 Prog-	 Ch -

