








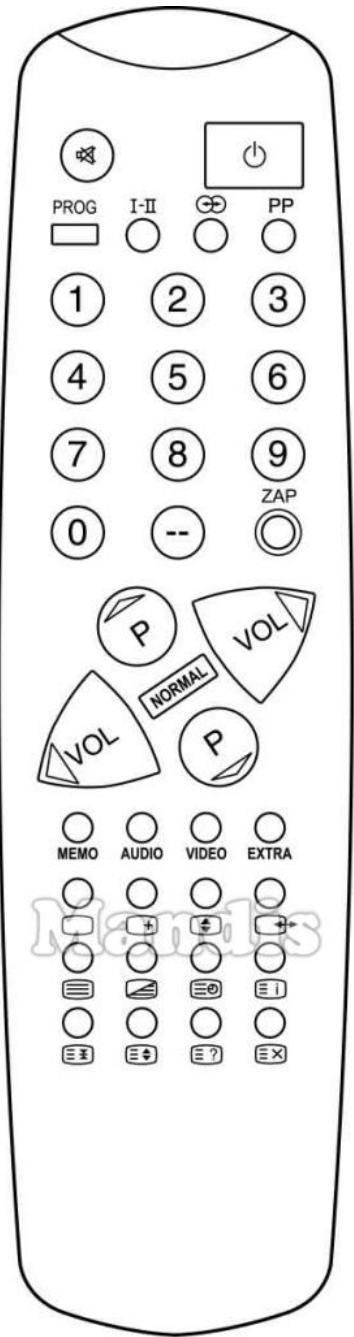




Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 Prog	 TV/Radio /
 I-II	 Audio / Lang I/II
 O to O	 Sound / Title
 PP	 Back / Return
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --	 Guide / EPG / --

Originale	Sostituto
 ZAP	 Smart / List
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 Normal	 OK
 Down / P-	 Down
 Down / P-	 CH- / Page-
 Red / Memo	 Red / Netflix / Search
 Green / Audio	 Green / APP / Repeat
 Green / Audio	 Shift + Audio / Lang I/II
 Yellow / Video	 Yellow / YouTube / Repeat
 Blue / Extra	 Blue / Prime Video / Random
 []	 Display / Media
 [+]	 Stop / Hold





	Originale	Sostituto	
	[♦]	OPT-TOOLS SETUP	Setup / OPT /
	[]↔	TOP MENU D.MENU	D.Menu / Top
	[≡]	GOTO TEXT	Text / Goto
	[/≡]	SHIFT + GOTO TEXT	Shift + Text /
	[≡⊘]	EQ SUBTITLE	Subtitle / EQ
	[≡ i]	ANGLE INFO	Info / Angle
	[≡⏸]	STEP-FREEZE II	Pause / Step / Freeze
	[≡ ♦]	SIZE ZOOM	Zoom / Size
	[≡ ?]	RDS AV INPUT	AV / Input / RDS
	[≡ X]	CLEAR EXIT	Exit / Cancel / Clear

Originale	Sostituto

