


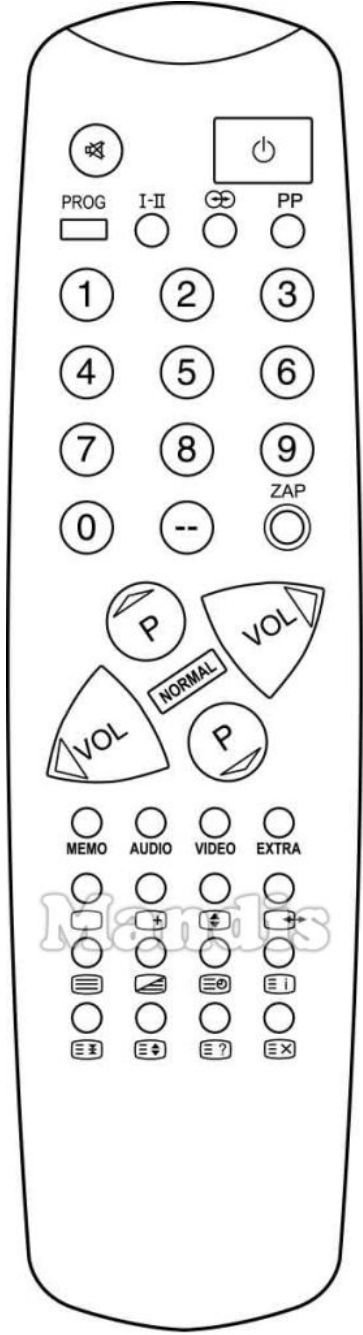

Originale	Sostituto
	Mute / Dimmer
	Power
	TV/Radio /
	Audio / Lang I/II
	Sound / Title
	Back / Return
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	Guide / EPG / --

Originale	Sostituto
	Smart / List
	Up
	CH+ / Page+
	Right
	Vol+
	Left
	Vol-
	OK
	Down
	CH- / Page-
	Red / Netflix / Search
	Green / APP / Repeat
	Shift + Audio / Lang I/II
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Display / Media
	Stop / Hold





Originale

Sostituto

	[ ◆ ]		Setup / OPT /
	[ ]↔		D.Menu / Top
	[ ≡ ]		Text / Goto
	[ / ≡ ]	+	Shift + Text /
	[ ≡ ⊖ ]		Subtitle / EQ
	[ ≡ i ]		Info / Angle
	[ ≡ □ ]		Pause / Step / Freeze
	[ ≡ ◆ ]		Zoom / Size
	[ ≡ ? ]		AV / Input / RDS
	[ ≡ X ]		Exit / Cancel / Clear

Originale

Sostituto