






 







 
 


 



 


 




 



 

 

 



 

 

 

 

 
 


 





 











Originale		Sostituto		Originale		Sostituto	
	Power		Power		Menu		Menu
	Mute		Mute		Exit		Exit
	Picture	 + 	Shift + Format		1		1
	Sound	 + 	Shift + Dual		2		2
	Aspect		Format		3		3
	Sleep		Sleep		4		4
	Subtitle		Subt		5		5
	CH.List		List		6		6
	FAV		Media		7		7
	TV/Radio		Pre Ch		8		8
	Input		TV/R		9		9
	Up		AV		0		0
	Left		Back		Recall		Back
	OK		Info		Display		Info
	Right		Vol +		Vol+		Vol +
	Down		Vol -		Vol-		Vol -
			Ch +		CH+		Ch +





Originale		Sostituto	
	CH-		Ch -
	Play/Pause		Play
	Play/Pause		Pause
	Stop		Stop
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	TV/TXT		Text
	Cancel	+	Shift + Back
	Reveal		Smart
	Nicam / A2		Dual
	<< / Index		<<
	>> / Hold		>>
	<<< / Size		<<<
	>>> / Subpage		>>>

Originale		Sostituto	

