

 





 





 







 



 

 



 



 



 







 


 






















 







 



 





 

 





Originale		Sostituto		Originale		Sostituto	
	Mute		Mute / Dimmer		Sound		Sound / Title
	Power		Power		10+		Guide / EPG / -/-
	Input DVD CD		Shift + 2		Clear		Shift + Exit / Cancel / Clear
	Input Radio /		Shift + 6		0		0
	Input VCR		Shift + 4		100+		Fav / Marker / PC
	Input SAT		Shift + 0		Input Mode		AV / Input / RDS
	Input AV AUX		Shift + 7		Front		Shift + Right
	1		1		Center		Shift + OK
	2		2		Rear		Shift + Left
	3		3		Sub-Woofer		Eject / Surround
	4		4		Repeat		Green / APP / Repeat
	5		5		Trim+		CH+ / Page+
	6		6		Volume+		Vol+
	Listen Mode		TV/Radio /		Repeat A-B		Yellow / YouTube / Repeat
	7		7		Trim-		CH- / Page-
	8		8		Volume-		Vol-
	9		9		Top Menu		D.Menu / Top





Originale	Sostituto
 Up	 Up
 Menu	 Menu / Home
 PTY	 Text / Goto
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 On Screen	 Display / Media
 Subtitle	 Subtitle / EQ
 Auto / Mono	 Audio / Lang I/II
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 <<	 << / Tune-
 Tune-	 Shift + << /
 >>	 >> / Tune+

Originale	Sostituto
 Tune+	 Shift + >> /
 I<<	 I<< / Preset-
 Preset-	 Shift + I<< / Preset-
 >>I	 >>I / Preset+
 Preset+	 Shift + >>I / Preset+
 Slow	 Shift + Play /
 Step	 Shift + Pause / Step /
 Bass Boost	 Zoom / Size
 Cine EQ.	 Picture / Format

