
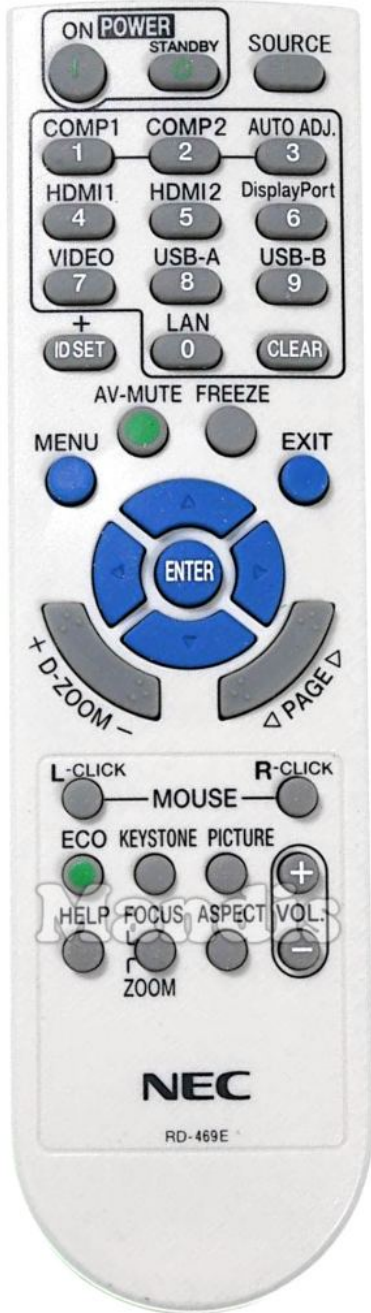












Originale	Sostituto
 Power On	 Power
 Standby	 Shift + Power
 Source	 AV / Input / RDS
 1/Comp1	 1
 2/Comp2	 2
 3/Auto Adj.	 3
 4/HDMI1	 4
 5/HDMI2	 5
 6/Display Port	 6
 7/Video	 7
 8/USB-A	 8
 9/USB-B	 9
 ID Set/+	 Guide / EPG / -/--
 0/LAN	 0
 Clear	 Shift + Exit / Cancel / Clear
 Clear	 Fav / Marker / PC
 AV-Mute	 Mute / Dimmer

Originale	Sostituto
 Freeze	 Pause / Step / Freeze
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 D-Zoom+	 >> / Tune+
 Down	 Down
 Page+	 CH+ / Page+
 D-Zoom-	 << / Tune-
 Page-	 CH- / Page-
 Mouse L-Click	 Smart / List
 Mouse R-Click	 Display / Media
 Eco	 D.Menu / Top
 Keystone	 Setup / OPT /
 Picture	 Picture / Format





Originale	Sostituto	Originale	Sostituto
 Vol+	 Vol+		
 Help	 Info / Angle		
 Focus/Zoom	 Zoom / Size		
 Aspect	 Shift + Picture / Format		
 Vol-	 Vol-		

