


 

 



 

 





 











 













 


 











 
 

 

 



 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Info		Info
	Sleep		Sleep		Input		AV
	Mute		Mute		Up / CH+		Up
	1		1		Up / CH+		Ch +
	2		2		Down / CH-		Down
	3		3		Down / CH-		Ch -
	4		4		Right / Vol+ / Enter		Right
	5		5		Left / Vol-		Left
	6		6		Left / Vol-		Vol -
	7		7		Right / Vol+ / Enter		Vol +
	8		8		Right / Vol+ / Enter		Ok
	9		9		Menu		Menu
	0		0		Page+		>>
	-/--		Guide		Page-		<<
	Recall		Back		Display	 + 	Shift + Info
	Audio		Dual		Exit		Exit
	P.M.		Smart		Red		Red



