
 

 
 





 
 
 

 

 
 






 





 




Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Source	 AV
 Radio / Angle	 TV/R
 List/USB	 List
 EPG/+10	 Guide
 Still	 Pause
 Aspect	 Format
 OO/I/II Audio	 Dual
 FAV+/Prog	 Smart
 FAV-/Repeat	 Media
 Info	 Info
 Sleep	 Sleep
 PIC	 Shift + Format
 Sound	 Shift + Dual
 Menu	 Menu
 Exit	 Exit

Originale	Sostituto
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 CH-	 Ch -
 CH+	 Ch +
 Vol-	 Vol -
 Vol+	 Vol +
 Recall	 Back
 Text/Left	 Text
 Text/Left	 Left
 Mix/Right	 Shift + Text
 Mix/Right	 Right
 [=o]/Subtitles	 Subt
 Index / Play	 Play
 Hold/I<<	 I<<





Originale	Sostituto	Originale	Sostituto
 Size/>>>I	 >>I	 Green/Title	 Green
 Cancel/Stop	 Stop	 Yellow/Setup	 Yellow
 Reveal/Open/Close/Rec	 Rec	 Yellow/Setup	 Options
 Reveal/Open/Close/Rec	 Eject	 Blue/D.Menu	 Blue
 1	 1	 Blue/D.Menu	 D. Menu
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Page-	 Shift + Ch -		
 Page+	 Shift + Ch +		
 Red/Goto	 Red		

Originale	Sostituto	Originale	Sostituto
 Green/Title	 Green	 Yellow/Setup	 Yellow
 Yellow/Setup	 Options	 Blue/D.Menu	 Blue
 Blue/D.Menu	 D. Menu		

