

 

 



 







 



 
 

 
 


 
 



 

 

 



 
 
 

 
 
 

 



 

 

 







 






Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Shift + Clear
 Repeat/Tv/Radi	 TV/R
 I<<	 I<<
 <<	 <<

Originale	Sostituto
 >>	 >>
 >>	 >>
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Guide	 Guide
 Rec	 Rec
 PR List	 List
 Timer Rec	 AV
 PR+	 Ch +
 PR-	 Ch -
 Home	 Smart
 Music ID	 Dual
 Info/Display	 Info
 Return	 Back
 Title/PopUp	 Media
 Disc Menu/Rec. List	 Menu





Originale		Sostituto	
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Marker		Format
	Search		Shift + TV/R
	Zoom		Shift + Eject
	Text		Text
	Subtitle		Subt
	Exit		Exit
	Power Tv		Shift + Power
	AV/Input Tv		Shift + AV

Originale		Sostituto	
	Vol+ Tv		Vol +
	Vol- Tv		Vol -
	PR+ Tv		Shift + Ch +
	PR- Tv		Shift + Ch -

