


 

 
 

 


 


 

 

 

 


 
 





 





Originale	Sostituto	Originale	Sostituto
PWR On/Off		Power	
Info		Info	
Subt.List		Subt	
TV		TV/R	
Text		Text	
Zoom		Eject	
TV/SAT		AV	
Menu		Menu	
Menu Up		Up	
Display		Shift + Info	
Menu Left		Left	
OK Enter		Ok	
Menu Right		Right	
Exit		Exit	
Menu Down		Down	
CH/Page+		Ch +	
CH/Page-		Ch -	
1. ?		1	
2abc		2	
3def		3	
4ghi		4	
5jkl		5	
6mno		6	
7pqrm		7	
8tuv		8	
9wxyz		9	
Guide Pilote		Guide	
0/10		0	
Red		Red	
Green		Green	
Yellow		Yellow	
Blue		Blue	
Freeze		Stop	
Dec/Pause		Pause	



Originale	Sostituto	Originale	Sostituto
East	 >>I		
LNB F.Forward	 >>		
Lang./Rewind	 <<		
H/V Play	 Play		

