



| Originale | Sostituto |
|----------------|---------------------------|
| Power | Power |
| CBL/SAT | Shift + 0 |
| DVD | Shift + 2 |
| TV Audio | Shift + 1 |
| Blu-ray | Shift + 5 |
| AUX1 | Shift + 7 |
| Tuner | Shift + 6 |
| Bluetooth | Shift + 9 |
| Game | Shift + Fav / Marker / PC |
| AUX2 | Shift + Guide / EPG / -/- |
| Phono | Shift + 4 |
| USB | Shift + 8 |
| Media Player | Display / Media |
| CD | Shift + 3 |
| Online Music | Smart / List |
| Internet Radio | Shift + Smart / List |
| CH/Page+ | CH + / Page+ |

| Originale | Sostituto |
|-----------|-----------------------------|
| Sleep | Sleep / Timer |
| Volume+ | Vol+ |
| CH/Page- | CH- / Page- |
| Mute | Mute / Dimmer |
| Volume- | Vol- |
| Eco | D.Menu / Top |
| Info | Info / Angle |
| Up | Up |
| Option | Shift + Setup / OPT / Tools |
| Left | Left |
| Right | Right |
| Back | Back / Return |
| Down | Down |
| Setup | Setup / OPT / |
| Home | Menu / Home |
| Stop | Stop / Hold |
| Pause | Pause / Step / Freeze |





| Originale | Sostituto |
|-----------|-------------------------------|
| | Play / Slow |
| | I<< / Preset- |
| | + Shift + << / |
| | >>I / Tune+ >>I / Preset+ |
| | + Shift + >> / |
| | << / Tune- |
| | >> / Tune+ |
| | + Shift + Red / Netflix / |
| | + Shift + Green / APP / |
| | + Shift + Yellow / YouTube / |
| | + Shift + Blue / Prime |
| | Green / APP / Repeat |
| | Red / Netflix / Search |
| | Blue / Prime Video / Random |
| | Yellow / YouTube / Repeat |
| | 1 |
| | 2 |

| Originale | Sostituto |
|-----------|-----------|
| | 3 |
| | 4 |
| | 5 |
| | 6 |
| | 7 |
| | 8 |
| | 9 |
| | 0 |
| | OK |



 


 



 

 

 

 



 

 

 

 

 

 

 

 





 

| Originale | Sostituto |
|--|--|
|  Power |  Power |
|  CBL/SAT |  Shift + 0 |
|  DVD |  Shift + 2 |
|  TV Audio |  Shift + 1 |
|  Blu-ray |  Shift + 5 |
|  AUX1 |  Shift + 7 |
|  Tuner |  Shift + 6 |
|  Bluetooth |  Shift + 9 |
|  Game |  Shift + Fav / Marker / PC |
|  AUX2 |  Shift + Guide / EPG / -/- |
|  Phono |  Shift + 4 |
|  USB |  Shift + 8 |
|  Media Player |  Display / Media |
|  CD |  Shift + 3 |
|  Online Music |  Smart / List |
|  Internet Radio |  Shift + Smart / List |
|  CH/Page+ |  CH+ / Page+ |

| Originale | Sostituto |
|---|---|
|  Sleep |  Sleep / Timer |
|  Volume+ |  Vol+ |
|  CH/Page- |  CH- / Page- |
|  Mute |  Mute / Dimmer |
|  Volume- |  Vol- |
|  Up |  Up |
|  Left |  Left |
|  Right |  Right |
|  Back |  Back / Return |
|  Down |  Down |
|  Home |  Menu / Home |
|  Stop |  Stop / Hold |
|  Pause |  Pause / Step / Freeze |
|  Play |  Play / Slow |
|  I<</Tune- |  Shift + << / |
|  I<</Tune- |  I<< / Preset- |
|  >>I/Tune+ |  >>I / Preset+ |






| Originale | | Sostituto | |
|---|----------------|---|-----------------------------|
|  | >> /Tune+ |  +  | Shift + >> / |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | Smart Select 1 |  | Red / Netflix / Search |
|  | Smart Select 2 |  | Green / APP / Repeat |
|  | Smart Select 3 |  | Yellow / YouTube / Repeat |
|  | Smart Select 4 |  | Blue / Prime Video / Random |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |

| Originale | | Sostituto | |
|---|-------|---|----|
|  | Enter |  | OK |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Originale | Sostituto |
|--|--|
|  Power |  Power |
|  CBL/SAT |  Shift + 0 |
|  DVD |  Shift + 2 |
|  TV Audio |  Shift + 1 |
|  Blu-ray |  Shift + 5 |
|  AUX1 |  Shift + 7 |
|  Tuner |  Shift + 6 |
|  Bluetooth |  Shift + 9 |
|  Game |  Shift + Fav / Marker / PC |
|  AUX2 |  Shift + Guide / EPG / -/- |
|  Phono |  Shift + 4 |
|  USB |  Shift + 8 |
|  Media Player |  Display / Media |
|  CD |  Shift + 3 |
|  Online Music |  Smart / List |
|  Internet Radio |  Shift + Smart / List |
|  CH/Page+ |  CH + / Page+ |

| Originale | Sostituto |
|---|---|
|  Sleep |  Sleep / Timer |
|  Volume+ |  Vol+ |
|  CH/Page- |  CH- / Page- |
|  Mute |  Mute / Dimmer |
|  Volume- |  Vol- |
|  Up |  Up |
|  Left |  Left |
|  Right |  Right |
|  Back |  Back / Return |
|  Down |  Down |
|  Home |  Menu / Home |
|  Stop |  Stop / Hold |
|  Pause |  Pause / Step / Freeze |
|  Play |  Play / Slow |
|  I<</Tune- |  Shift + << / |
|  I<</Tune- |  I<< / Preset- |
|  >>I/Tune+ |  >>I / Preset+ |





| Originale | | Sostituto | | Originale | | Sostituto | |
|-----------|----------------|-----------|-----------------------------|-----------|-------|-----------|----|
| | >> / Tune+ | + | Shift + >> / | | Enter | | OK |
| | << | | << / Tune- | | | | |
| | >> | | >> / Tune+ | | | | |
| | Smart Select 1 | | Red / Netflix / Search | | | | |
| | Smart Select 2 | | Green / APP / Repeat | | | | |
| | Smart Select 3 | | Yellow / YouTube / Repeat | | | | |
| | Smart Select 4 | | Blue / Prime Video / Random | | | | |
| | 1 | | 1 | | | | |
| | 2 | | 2 | | | | |
| | 3 | | 3 | | | | |
| | 4 | | 4 | | | | |
| | 5 | | 5 | | | | |
| | 6 | | 6 | | | | |
| | 7 | | 7 | | | | |
| | 8 | | 8 | | | | |
| | 9 | | 9 | | | | |
| | 0 | | 0 | | | | |

