





























 































 




























 


Originale	Sostituto	Originale	Sostituto
 Power	 Power	 EPG	 Guide / EPG / -/--
 Tv/Radio	 TV/Radio /	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Display	 Display / Media
 1	 1	 Audio	 Audio / Lang I/II
 2	 2	 Left	 Left
 3	 3	 Vol-	 Vol-
 4	 4	 Up/CH+	 Up
 5	 5	 Right	 Right
 6	 6	 Vol+	 Vol+
 7	 7	 Enter	 OK
 8	 8	 Down/CH-	 Down
 9	 9	 ▲	 CH+ / Page+
 0/10	 0	 Red	 Red / Netflix / Search
 Recall	 Back / Return	 Blue	 Blue / Prime Video / Random
 FAV	 Fav / Marker / PC	 ▼	 CH- / Page-
 TTX	 Text / Goto	 Green	 Green / APP / Repeat
 Subtitle	 Subtitle / EQ	 Yellow	 Yellow / YouTube / Repeat

Originale	Sostituto	Originale	Sostituto
 EPG	 Guide / EPG / -/--	 TV	 DIMMER MUTE
 Menu	 Menu / Home	 DVD	 SHIFT
 Display	 Display / Media	 SAT	 AUX
 Audio	 Audio / Lang I/II	 SLOW	 STEP-FREEZE
 Left	 Left	 HOLD	 REC MODE
 Vol-	 Vol-	 TUNE-	 TUNE+
 Up/CH+	 Up	 PRESET-	 PRESET+
 Right	 Right	 TITLE	 LANG I/II
 Vol+	 Vol+	 EQ	 SURROUND
 Enter	 OK	 SOUND	 AUDIO
 Down/CH-	 Down	 SUBTITLE	 TIMER
 ▲	 CH+ / Page+	 PICTURE	 ZOOM
 Red	 Red / Netflix / Search	 SLEEP	 PROGRAM
 Blue	 Blue / Prime Video / Random	 TOP MENU	 OPT-TOOLS
 ▼	 CH- / Page-	 GOTO	 RDS
 Green	 Green / APP / Repeat	 D.MENU	 SETUP
 Yellow	 Yellow / YouTube / Repeat	 TEXT	 AV INPUT



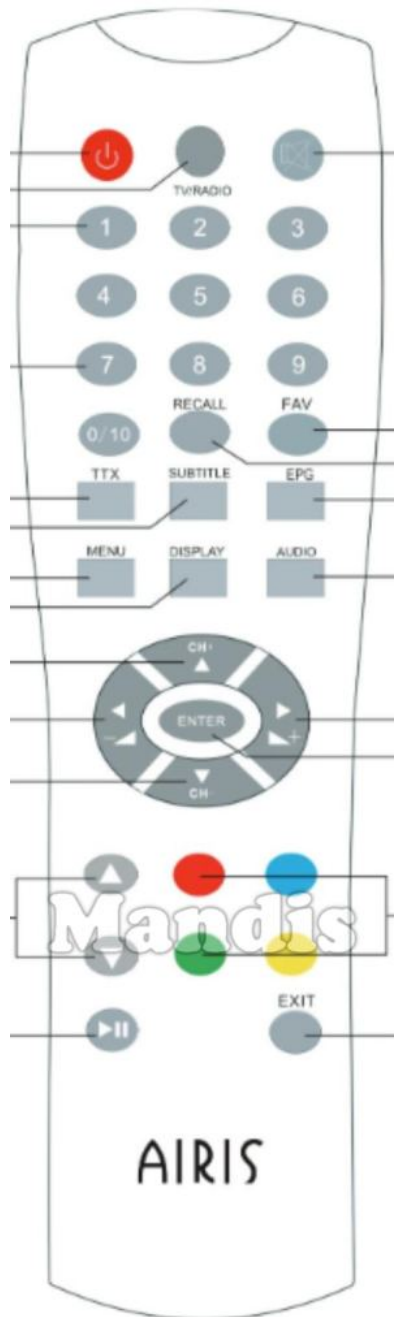

Originale	Sostituto	Originale	Sostituto
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Exit	 Exit / Cancel / Clear		

