

















 









 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		X		Back / Return
	Review		Smart / List		9		9
	Left/ <</-		Left		0		0
	Left/ <</-		<< / Preset-		Timer		Sleep / Timer
	Right/>> /+		Right		PR+		CH+ / Page+
	Right/>> /+		>>  / Preset+		Start Debut +		Green / APP / Repeat
	Tv/VCR		AV / Input / RDS		Start Debut -		Red / Netflix / Search
	--:--		Exit / Cancel / Clear		Stop Fin +		Blue / Prime Video / Random
	Audio		Audio / Lang I/II		PR-		CH- / Page-
	1		1		Stop Fin -		Yellow / YouTube / Repeat
	2		2		Date-		Vol-
	3		3		Date+		Vol+
	4		4		Prog		TV/Radio /
	5		5		<<		<< / Tune-
	6		6		30 Sec/>>		Display / Media
	7		7		Timer/?		Shift + Sleep / Timer
	8		8		Play		Play / Slow





Originale		Sostituto		Originale		Sostituto	
	'/'		Guide / EPG / -/--				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Menu		Menu / Home				
	OK		OK				
	Up		Up				
	Down		Down				
	Tv Vol-		Shift + Vol-				
	Tv Vol+		Shift + Vol+				
	Tv PR-		Shift + CH- /				
	Tv PR+		Shift + CH+ /				
	Tv/VCR Tv		Shift + AV / Input / RDS				
	Power Tv		Shift + Power				
	Mute Tv		Shift + Mute / Dimmer				

