 

 
 


 
 
 
 
 

 



 
 

 
 



 
 

 
 
 
 

 





Originale	Sostituto
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Search	 TV/R
 Prog/Direct	 Sleep
 Clear	 Exit
 Call	 Pre Ch

Originale	Sostituto
 Dimmer	 Shift + Info
 YouTube	 Media
 Netflix	 Shift + Smart
 Vidu	 Shift + Media
 Info	 Info
 Home	 Smart
 Power AMP	 Shift + Power
 Source Up	 Ch +
 Source Down	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Top Menu	 Menu
 Pop Up Menu	 D. Menu
 Return	 Back
 Setup	 Shift + Options
 Up	 Up





Originale	Sostituto
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 <<	 <<
 Play	 Play
 >>	 >>
 I<<	 I<<
 Pause	 Pause
 Stop	 Stop
 >>	 >>
 Repeat	 Text
 A-B	 Shift + Back
 Random	 AV
 Pure	 Format
 Subtitle	 Subt
 Angle	 List

Originale	Sostituto
 Audio	 Dual
 Option	 Options
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Video Resolution	 3D
 DVD a Page	 Shift + AV
 Disc Layer	 Shift + Format
 Picture Adjust	 Shift + 3D

