






 

 

 

 



 

 

 

 

 












Originale	Sostituto
 Power	 Power
 Source	 AV
 HDMI	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 PRE-CH	 Pre Ch
 Mute	 Mute
 CH List	 List

Originale	Sostituto
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Home	 Smart
 Menu	 Menu
 Guide	 Guide
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Red	 Red
 Green	 Green





Originale		Sostituto	
	Yellow		Yellow
	Blue		Blue
	Dual I-II		Dual
	Content		D. Menu
	3D		3D
	Alarm		TV/R
	P.Size		Format
	Subt.		Subt
	Enter		Ok
	<</l<<		<<
	Pause		Pause
	>>/>>l		>>
	Play		Play
	Rec		Rec
	Stop		Stop

Originale		Sostituto	

