






Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 Mute	 Mute / Dimmer
 4	 4
 5	 5
 6	 6
 Recall	 Back / Return
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu / Home
 Up	 Up
 CH+	 CH+ / Page+
 Exit	 Exit / Cancel / Clear

Originale	Sostituto
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Pg Up	 Shift + CH+ /
 Down	 Down
 CH-	 CH- / Page-
 Pg Dn	 Shift + CH- /
 Tv/Radio	 TV/Radio /
 Info	 Info / Angle
 FAV	 Fav / Marker / PC
 Audio	 Audio / Lang I/II
 Sub-T	 Subtitle / EQ
 TTX	 Text / Goto
 EPG	 Guide / EPG / -/-
 Play	 Play / Slow





Originale		Sostituto		Originale		Sostituto	
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	Rec		Rec / Rec Mode				
	Red/<<		Red / Netflix / Search				
	Green/>>		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue/PVR		Blue / Prime Video / Random				

