



Originale	Sostituto
	Mute / Dimmer
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/--
	0
	Smart / List
	D.Menu / Top
	Info / Angle
	TV/Radio /

Originale	Sostituto
	Up
	Left
	OK
	Right
	Down
	Exit / Cancel / Clear
	Back / Return
	Menu / Home
	CH+ / Page+
	Text / Goto
	Setup / OPT /
	Vol+
	CH- / Page-
	Shift + 1
	Shift + 2
	Vol-
	Rec / Rec Mode





Originale	Sostituto
Play	Play / Slow
Archive	Display / Media
<<	<< / Tune-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Originale	Sostituto

