


 
 





 





 







 
 










Originale	Sostituto
 Power	 Power
 Mute	 Mute
 TV	 Media
 Text	 Text
 Info	 Info
 PIP	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide

Originale	Sostituto
 Source	 AV
 Menu	 Menu
 DTV Guide	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 PR+	 Ch +
 PR-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Exit	 Exit
 ARC	 3D
 PRE-CH	 Back
 Mix	 Shift + Text
 CANCEL	 Subt





Originale	Sostituto
	 Options
	 Eject
	 Shift + Options
	 Play
	 Shift + Info
	 Red
	 Green
	 Yellow
	 Pause
	 Blue
	 >>
	 Sleep
	 <<
	 I<<
	 D. Menu
	 TV/R
	 >>I

Originale	Sostituto
	 Shift + Media
	 Dual
	 Shift + Power
	 Shift + Subt
	 Shift + Dual
	 List
	 Format
	 Pre Ch
	 Shift + Red
	 Shift + Yellow
	 Shift + Green
	 Shift + Back

