



Originale	Sostituto
ReSync	Back / Return
Source	AV / Input / RDS
Power	Power
Video	4
HDMI	0
VGA	Display / Media
3D	3
Keystone+	Up
Aspect	Picture / Format
Vol- (Left)	Left
Vol- (Down)	Vol-
Enter	OK
Vol+ (Right)	Right
Vol+ (Up)	Vol+
Menu	Menu / Home
Down/Keystone-	Down
Zoom	Zoom / Size

Originale	Sostituto
	Setup / OPT /
	Mute / Dimmer
	Smart / List

