


 
 
 

 

 

 
 
 
 
 

 

 
 
 
 

 
 
 



 



 


 
 

 


 

 
 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		Dev.List		List
	Mute		Mute		Video		Guide
	1		1		Subtitle		Subt
	2		2		Text		Text
	3		3		Auto		Options
	4		4		Menu		Menu
	5		5		Zoom		Eject
	6		6		Info		Info
	7		7		Exit		Exit
	8		8		CH+		Ch +
	9		9		CH-		Ch -
	0		0		Up		Up
	FAV		Pre Ch		Down		Down
	Recall		Back		Right		Right
	Lang		Dual		Left		Left
	Time Shift		Smart		Enter		Ok
	Tv/Radio		TV/R		Vol+		Vol +





Originale	Sostituto	Originale	Sostituto
	 Vol -		
	 Media		
	 Rec		
	 Stop		
	 Play		
	 Pause		
	 <<		
	 >>		
	 I<<		
	 >>I		
	 Red		
	 Green		
	 Yellow		
	 Blue		

